


# MANUAL SCUBA TECTOR PRO

## ON/OFF:

Press and hold the power button until the device turns on/off.


## SOUND MODE:

Press the mode button to switch through different sound modes. Sound only, vibration only, sound+vibration.

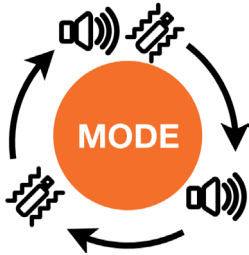

## SENSITIVITY:

Hold the mode button and press the power button at the same time, to switch through 4 different sensitivity levels. Levels 1, 2, 3 and BOOST.

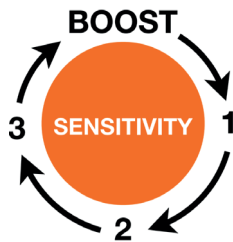

## RECHARGE:

Remove the battery cap to be able to connect the USB-C cable to the USB-C port inside the device and an USB wall charger.



## DIVE MODE:

Press and hold the MODE button inside the device to enter the DIVE MODE. In DIVE MODE, the buttons of the device won't work anymore, because the pressure of the water in a certain depth would press them automatically. To activate searching in the DIVE MODE, you have to **turn the device upside down three times**, until it makes a confirmation sound. Now you can search. To go back to the standby state, keep the detector pointed upwards for 5 seconds, until you hear a confirmation sound.



## PLEASE NOTE:

- Install the anchor ring and attach the lanyard to not lose the detector, especially while detecting under water.
- Keep the thread of the battery cap clean and greased.
- Before searching under water, make sure that the battery cap is screwed in tightly, so that no water can get in.